

RUN

CONTEG, spol. s r.o.**Headquarters:**

Na Vítězné pláni 1719/4
140 00 Prague 4
Czech Republic
Tel.: +420 261 219 182


Production plant:

K Silu 2179
393 01 Pelhřimov
Czech Republic
Tel.: +420 565 300 300


conteg@conteg.com
www.conteg.com

NÁVOD K OBSLUZE A ÚDRŽBĚ
ASSEMBLY AND OPERATING MANUAL

1.1. Requested tools (not included)

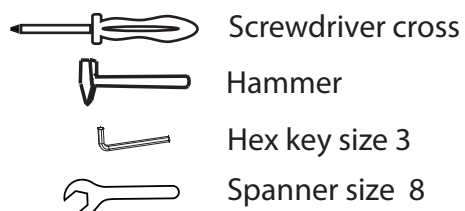


 1.2. Legend





2. Assembly

2.1.

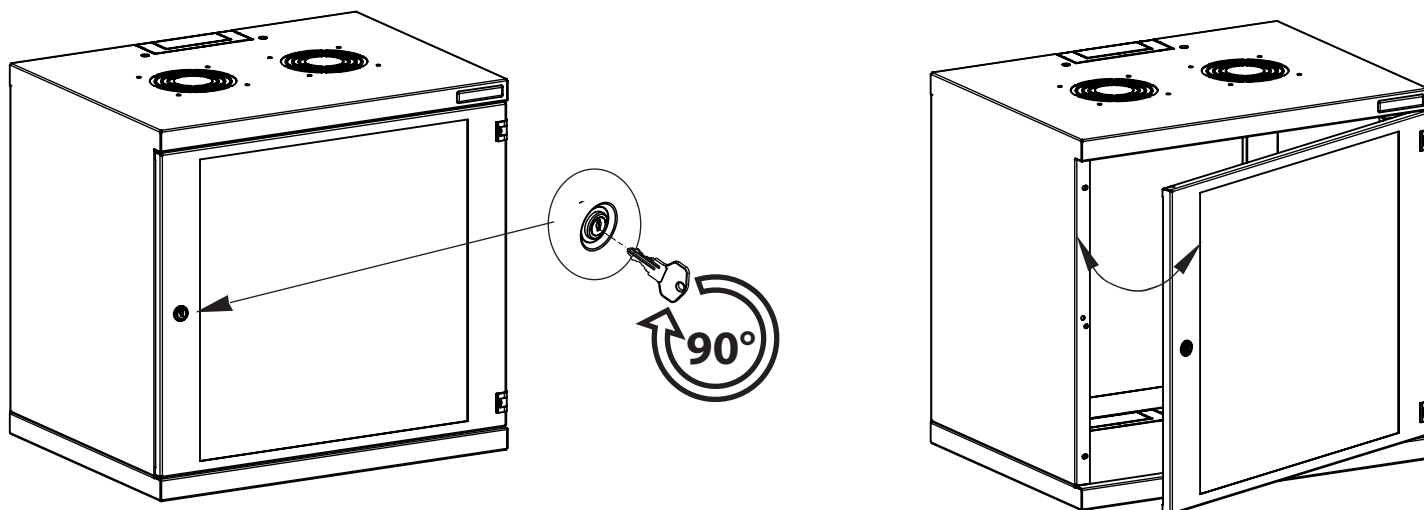


2.2.

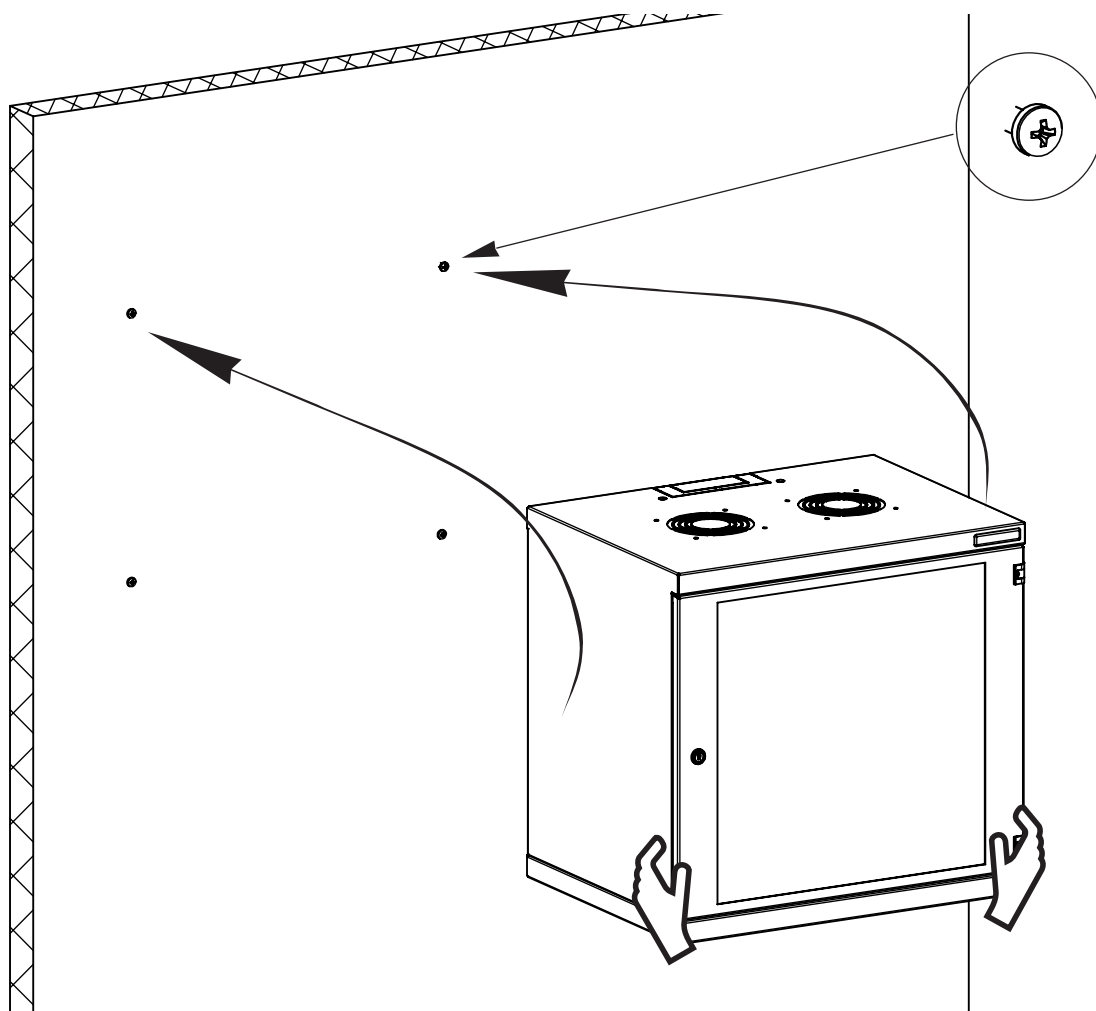


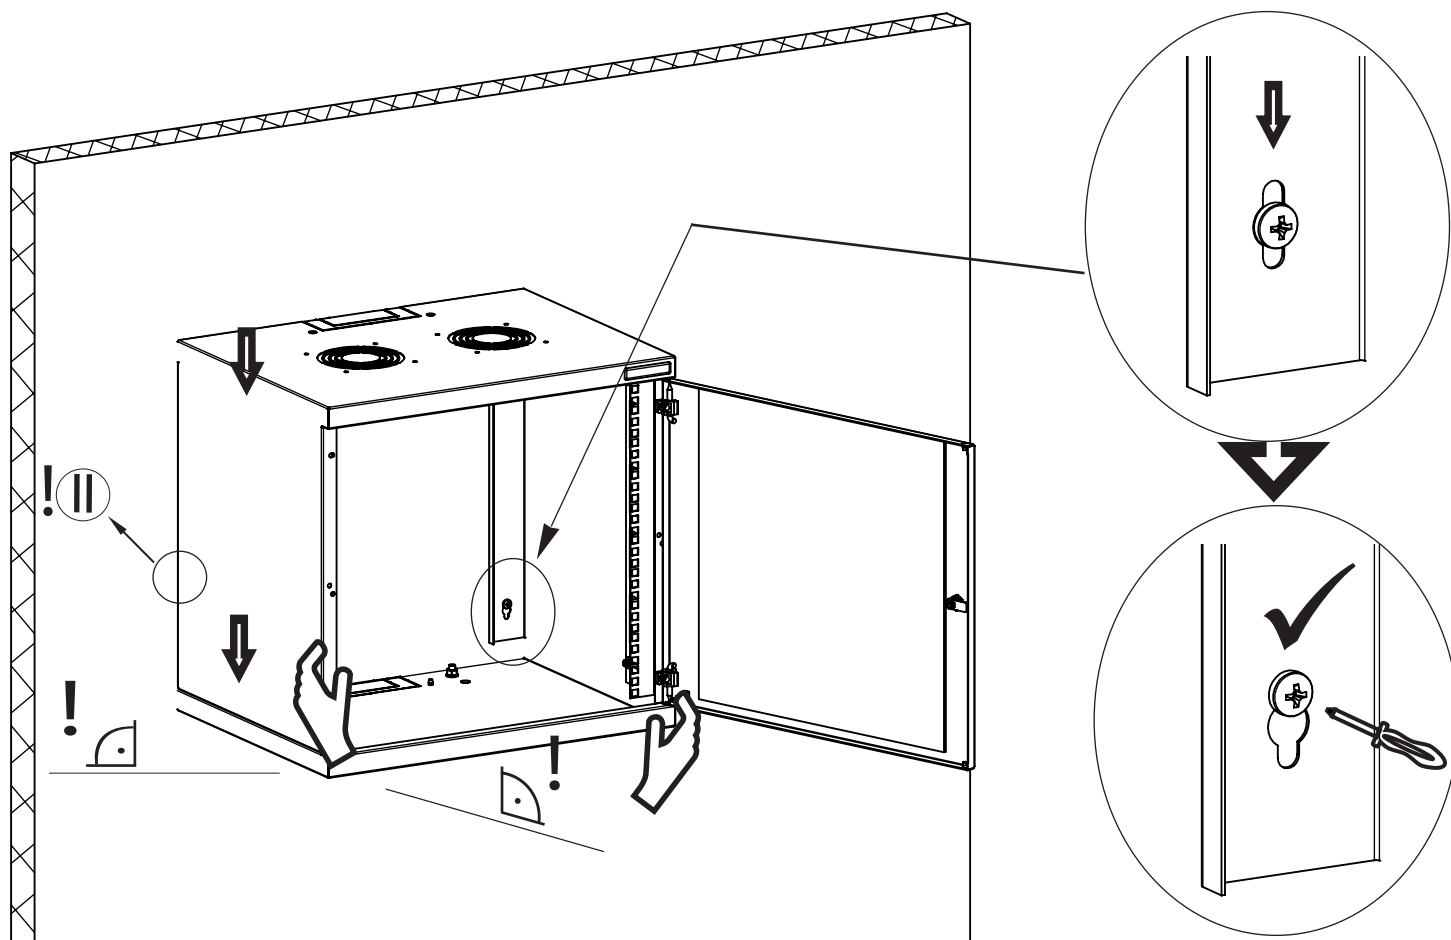

2.3.

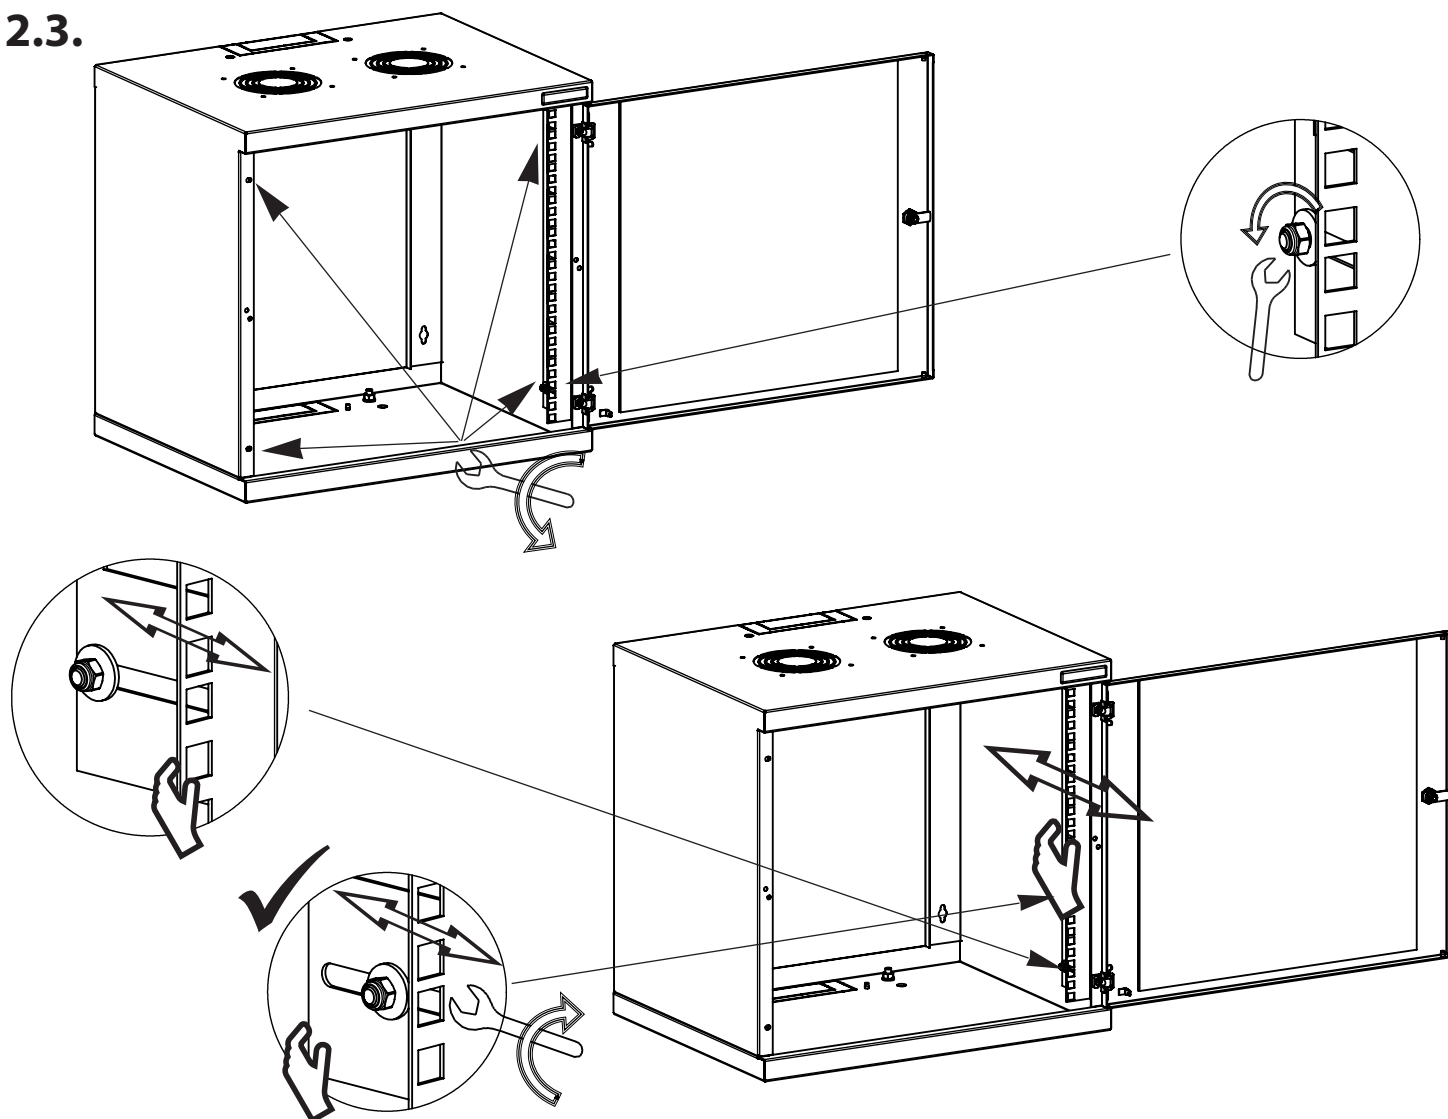

2.4.

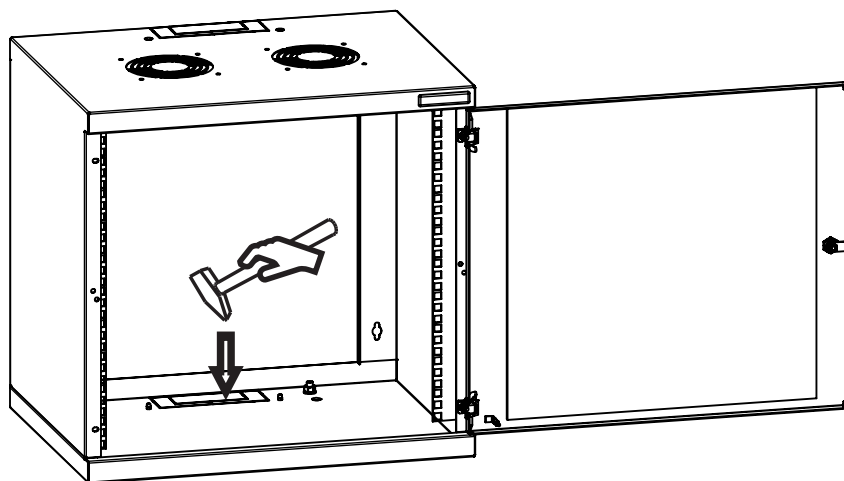

2.5.

